



Vulcan+™

INSTALLATION INSTRUCTIONS

Multiple Cables

1) Bolt the cleat to the support structure using either the single central or two outer fixing positions.



Single Cable



2) Install the cables, when necessary remove the removable base pad to allow for the larger cables in the cleats range.



Multiple Cables

3) Remove the flange nut. Bend the two edges of the cleat around the cables until they are parallel. Locate the screw into adjacent hole and replace the flange nut.



Single Cable



4) Tighten the flange nut.



***Important*.** Do not over tighten the cleat. The liner should be in good firm contact with the cable but does not need to be so tight that the cable bulges at either side of the liner.

Please note: Thread galling is a known phenomenon which can occur when using stainless steel fasteners. A breakdown in the material's protective oxide layer results in the set screw and nut becoming welded together. To reduce the incidence of thread galling excessive pressure and speed should be avoided during installation. Thread lubricants can also be used at the point of application if problems are experienced - please contact Ellis Patents for further information.



Conduit & cable hardware 4CG8 with AH-2 & wet locations.

Range listed as follows: VRT+00 to VRT+18 & VRQ+01 to VRQ+09.

Mounting orientation:
Horizontal or Vertical.

UL bolt torque values:

VRT+06: 70 lbf-in

VRQ+03: 35 lbf-in

NOTE: UL tested bolt torque values may not represent the most ideal bolt torque setting for your cable, please see *.



THORNE &
DERRICK
INTERNATIONAL

Thorne & Derrick
+44 (0) 191 410 4292
www.powerandcables.com