Service / Mains, Neutral / Earth Connectors

MECHANICAL CONNECTORS



NE Connectors (ALUMINIUM ALLOY)



Shear-head screw NE9/NE10

*Non Shear-head screw NE11/NE12

Principle Application

Stranded aluminium and copper neutral/earth (CNE) conductors.

Range

Ref. Code	Conductor c.s.a. (mm²)		
	min.	max.	
NE9	25	150	
NE10	140	240	
NE11*	25	150	
NE12*	25	240	

*Note: See technical data overleaf

The Hepworth Neutral Earth Connectors have been designed to connect the stranded copper and stranded aluminium neutral earth conductors of CNE (waveform) service and mains distribution cables.

All joint configurations can be accommodated dependant on the total cross sectional area of neutral/earth conductor to be jointed.

Each connector is supplied complete with brass gauze as standard.

See overleaf for fitting instructions.





Service / Mains, Neutral / Earth Connectors

MECHANICAL CONNECTORS

NE Connectors

Physical Dimensions



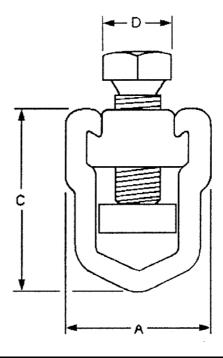

Ref. Code	Dimensions (mm)			
	А	В	С	D
NE9	28.5	16.0	36.0	13.0
NE10	28.5	16.0	46.0	13.0
NE11	28.5	16.0	36.0	13.0
NE12	28.5	16.0	46.0	13.0

Material

Body: Aluminium Alloy **Screw**: Aluminium/Brass

Test Specification: Engineering recommendation C79.

Test report numbers—NE9/1/2A7ONE/1/2A7ONE

Fitting Instructions

- 1. Arrange the CNE conductors into the required number of bunches for the particular joint and, where necessary, cut the conductors to length.
- 2. Thoroughly abrade all conductors around the assembly area.
- 3. Fit the yoke around the conductors, insert the bridge piece and tighten the screw until positive location is achieved.
- 4. If the connector employs a shear head system (NE9, NE10), check for even distribution of the conductors before finally tightening the screw until the head shears.

Note: When jointing CNE aluminium to copper conductors ensure the supplied brass gauze is fitted around the copper conductors only.



Thorne & Derrick +44 (0) 191 410 4292 www.powerandcables.com